 


- How to wear

English 01

Beker can be placed on goggle straps or beneath a swim cap.

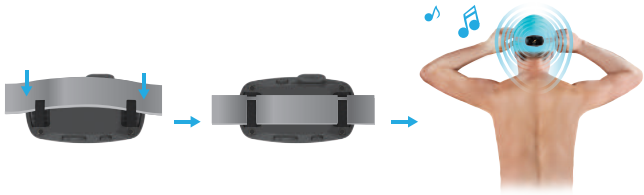

● Specifications

Physical

Weight : 34g

Dimensions : 7.4 X 4.1 X 1.8cm

Waterproof class : IPX8

Speaker : Piezoelectric vibration

Electrical

Frequency response : 20Hz~20KHz

SNR : >70dB

Working temperature : 0~40°C

Input Voltage : 5V

System

Music file type : MP3 / WMA / WAV

Supported OS : Win 10/8/7/Vista/XP; Mac; Linux

Memory : 8GB

Data cable : Special magnetic & waterproof USB interface

Accessories : Proprietary USB cable / Earplugs / Headband

Internal Battery


Play time : 8 hours

Charging time : 50 min

Li-ion battery : 300 mAh

● Charging


English 03

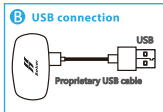

● Important Notes

1. Please charge the device for 50 minutes prior to first use.
2. Make sure the USB port cover is securely closed before going into water.
3. It is advised not to wear this product in highly physical or violent sports to prevent possible injury caused by broken parts due to impact.
4. Stop using the product if it feels uncomfortable during use.
5. This product is not guaranteed to function properly below 0°C and above 40°C or over 3 meters below water level.
6. Please rinse the product with clean water after use in hot spring or salt water.
7. Please do not remove the USB cable when transferring files or formatting the internal memory.
8. Do not open the shell; there are no user serviceable parts inside.
9. This product is covered by limited warranty, which excludes damages resulting from misuse, accidents, tampering, or use in operating environments beyond product specifications.

● Key functions

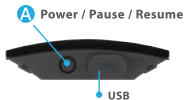

Key	Action	Function
A	Press and hold	for 2 seconds to power on
		(when on) for 1.5 seconds to power off (Auto power off if idle for over 15 minutes.)
	Press	to pause playback
		to resume playback
B	Press	to go to the next track
	Double press	to go to the previous track
	Triple press	to jump to the first track
	Press and hold (while on)	for 1.5 seconds to switch the playback mode (LED blinks twice for sequential playback) (LED blinks three times for random playback)
C	press	to raise/lower volume